


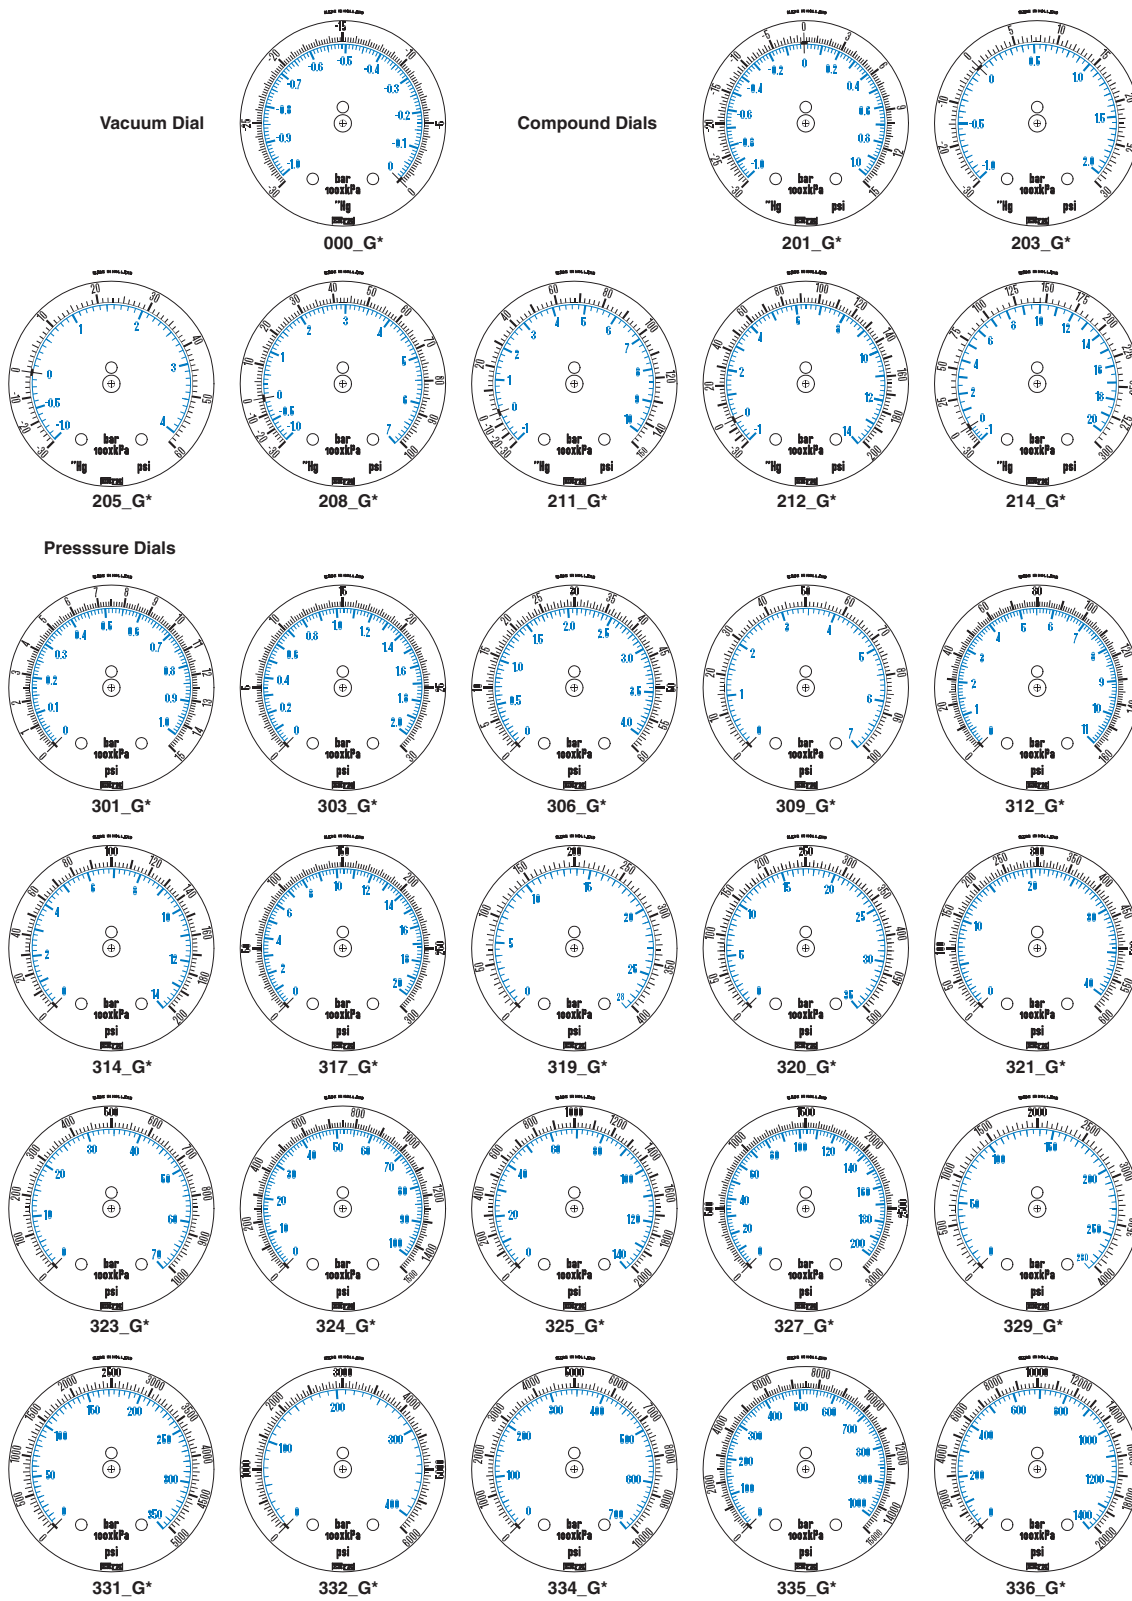

Standard scale divisions tr-scale, size 4", 4 1/2" & 6"



*pressure and Dial code at position 9,10,11 and 13 of article number.